

Latest LC Materials for High Contrast Ratio TV and IT Displays

Sven Christian Laut¹, Harald Hirschmann¹, Achim Götz¹
Peter Zhao², Lawrence Huang²

peter.zhao@merckgroup.com

¹ Merck Electronics KGaA, Germany

² Merck Display Materials Co., Ltd., Shanghai, China

Keywords: Liquid Crystal, IPS, FFS, UB-FFS, High Contrast

ABSTRACT

Improving image quality is an eternal theme for liquid crystal (LC) displays due to the high demand from technology and market. Contrast ratio is very essential for image quality when the display is used in ambient light. Therefore, enhancing the contrast ratio especially for IPS/FFS technology-based display is particularly important. In this paper, we will present the evolution of UB-FFS LC mixtures, showcase our latest LC materials that achieve record-high contrast ratios for different applications.

1 Introduction

1.1 The evolution of LCD technology

The performance of electronic displays has steadily improved over time due to significant technological advancements, accompanied by improvement of key parameters like switching speed, contrast ratio, color accuracy, brightness, power consumption, size, and form factor, which altogether enhance the immersion of content experience. Still today, the performance of these parameters characterizes premium displays.

Over the years, LCD technology has evolved and enabled larger screens with higher resolutions and diverse form factors, such as curved displays, whilst achieving increasingly thinner profiles and smaller bezels [1].

When looking closer into the LCD technology, it becomes clear that not only one single LCD technology exists, but several sub-technologies [1].

Vertical Alignment (VA) technology including Polymer Stabilized Vertical Alignment (PSVA) technology dominates the large-screen market due to their superior contrast ratio [2,3].

In the IT sector, In-Plane Switching (IPS) technology including Fringed Field Switching (FFS) prevails, as it offers superior viewing angle dependency compared to VA displays [4].

Additionally, the Twisted Nematic (TN) technology needs to be mentioned as the origin of successful commercialized LCD technologies and known for its fast-switching speeds. On the other hand, it shows inferior contrast ratio and viewing angle performance [5]. As a result of these disadvantages, TN displays are becoming less present in the market, clearly indicating that displays with high picture quality will prevail.

The emergence of OLED displays has introduced a new disruption, offering exceptional picture quality characterized by vibrant colors, high contrast ratio, and fast switching speeds. However, challenges remain regarding the longevity and brightness of OLEDs, where LCDs still demonstrate superior performance [6].

High brightness is essential for displays used in environments with significant ambient light. Surface treatment of displays, which optimizes reflection and luminance, plays a critical role in determining ambient contrast ratio. Significant ambient light conditions are clearly not only found outdoors but also in e.g. office settings, where sufficient ambient light contributes to a comfortable working atmosphere and promotes eye health [7,8]. In these environments, LCD displays can deliver superior performance.

Despite their advantages, IPS-type LCD displays face a notable disadvantage in contrast ratio compared to VA LCD displays, highlighting the need for further improvements in this area. This paper will explore the development of new liquid crystal molecules and mixtures that have significantly enhanced the contrast ratio of IPS-type displays, while also addressing the current limitations and challenges that remain.

1.2 UB-FFS - the perfect solution for high contrast

Contrast is defined as the ratio of the transmittance in the bright state to that in the black state. To achieve optimal contrast ratio, both high brightness and deep black levels are essential. In the realm of IPS technologies, a significant improvement in the transmittance of conventional IPS-type displays was introduced in 1999 using liquid crystals with negative dielectric anisotropy [4,9,10,11,12]. However, the drawback of these materials was their high rotational viscosity and therefore poor switching speed [13,14]. It was not until 2014 that this technology was commercialized using materials from Merck, known as Ultra Bright FFS (UB-FFS) technology, which enabled sufficient fast switching speeds [15].

This technology achieves up to 15% higher transmittance due to the more efficient switching of liquid crystals with negative dielectric anisotropy in a nonuniform electric field, resulting in less scattering in the transmission profile (see Figure 1), particularly at the

edges of the electrodes. The increased transmittance and, consequently, the higher bright state make UB-FFS an effective solution for enhancing the ambient contrast ratio of LCD displays in environments where ambient light is present.



Figure 1. UB-FFS versus FFS Transmittance

Additionally, UB-FFS can provide a superior black state. Its more efficient switching behavior requires a lower birefringence (Δn) of the liquid crystal mixture compared to traditional FFS for a fixed cell gap (see Figure 2).

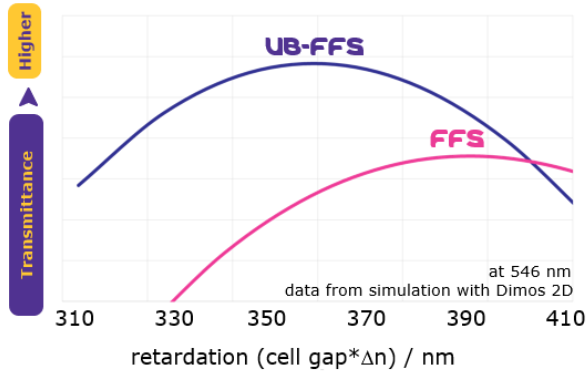


Figure 2. Optimum retardation of UB-FFS versus FFS

A lower Δn is advantageous for achieving a deeper black state, as it improves the black state through decreased scattering parameter (S) (see equations 1 & 2) [16]. The scattering parameter can be divided into S_{Cell} which includes the cell thickness d , and S_{LC} which describes only the liquid crystal contribution.

Furthermore, high elastic constants minimize light scattering, thereby reducing light leakage and enhancing the black level of an IPS-type display [16].

When considering the entire liquid crystal cell, the thickness of the liquid crystal layer (d) also plays a significant role [16]. It is important to note that the ratio between Δn and d must be optimized to achieve the best contrast ratio, balancing high brightness while minimizing light leakage.

Overall, UB-FFS offers a clear solution for advancing the contrast ratio of IPS-type displays by providing higher

brightness and deeper black levels.

$$S_{LC} = \frac{\Delta n^2 \cdot (n_e + n_o)^2}{K_{Avg.}} \quad (1)$$

$$S_{Cell} = \frac{\Delta n^2 \cdot (n_e + n_o)^2}{K_{Avg.}} \cdot d \quad (2)$$

S : Scattering Parameter

n : refractive index of the LC

K : elastic constant of the LC

d : cell thickness of the LC layer

2 Experiments & Results

2.1 LC mixtures development

There was a significant delay between the discovery of UB-FFS and its commercialization, primarily due to its slow switching speed. The initial commercialization of UB-FFS occurred in mobile phones and later as UBplus technology in televisions (TVs) featuring enhanced resolution [15, 17]. The increased resolution resulted in a decrease of aperture ratio, finally resulting in a loss of transmittance which could be partially mitigated by UB-FFS/UBplus technology. At that time, the switching speed was just acceptable, which clearly indicated that the goal of new material development for UB-FFS was to identify materials with even faster switching speeds. This pursuit continues today in the field of gaming applications (see section 2.3). Developing new liquid crystals and liquid crystal mixtures that possess higher elastic constants to enhance the contrast ratio was not in focus at that time.

It took additional years to recognize the contrast ratio advantages of this technology: Continuous advancements in liquid crystals with faster response times enabled the formulation of mixtures with significantly improved, nearly doubled, elastic constants without any negative impact on response time parameter γ_1/K_{11} (see Table 1; response time parameter is γ_1/K_{22} , but K_{22} is empirically considered to be half of K_{11}) [15]. Having mixtures with faster response time parameters allowed the design of LC mixtures with a higher Nematic – Isotropic Phase transition temperature (T_{NI}) which enables higher elastic constants while having no drawback in response time (see Table 1).

This advancement enabled a tremendous improvement in contrast ratio due to an enhanced black state (see equation 1), while maintaining a similar response time parameter and enabled the IPS Black technology [17].

The challenge here lies in achieving a broader nematic range which is necessary for ensuring a stable product within the specified temperature range.

Table 1. UB-FFS for mobile vs High CR UB-FFS

Property (20 °C)	Ref. Mixture for Mobile	High CR Mixture A
T_{NI} (°C)	80	121.0
Δn (589 nm)	0.110	0.102
$\Delta \epsilon$ (1 kHz)	-4.1	-4.0
γ_1 / mPas	102	189
K_{11} / pN	15.0	27.6
K_{33} / pN	15.0	25.0
$K_{Avg.}$ / pN	12.5	22.1
γ_1 / K_{11} / mPas/pN	6.8	6.8

2.2 New LC Molecule Development

The development of High CR Mixture A (see Table 1) marked a significant breakthrough in the performance of IPS-type displays regarding contrast ratio, generating interest in understanding the limitations of contrast ratio for IPS-type displays. Since the LC mixture directly influences the contrast ratio, there is a demand for developing LC mixtures with even higher elastic constants. To achieve this, a new liquid crystal (LC-21-1) was introduced, resulting in an improvement of more than 15% in scattering parameter, while keeping similar response time compared to High CR Mixture A (see Table 2). The latest developed LC materials LC-24-1 and LC-21-1 enable an LC mixture (High CR Mixture C) to achieve a scattering parameter improvement of over 25% relative to High CR Mixture A.

Table 2. High CR UB-FFS mixtures with new LCs

Property	High CR Mixture A	High CR Mixture B	High CR Mixture C
New LC	-	LC-21-1	LC-21-1 LC-24-1
T_{NI}	121.0	122.7	122.7
Δn (589 nm)	0.102	0.101	0.101
$\Delta \epsilon$ (1 kHz)	-4.0	-3.6	-3.7
$K_{Avg.}$ / pN	22.1	25.1	26.7
γ_1 / K_{11} / mPas/pN	6.8	6.6	6.6
S_{LC} / 1/pN	0.0125	0.0108	0.0100

Additionally, it is possible to create mixtures with lower birefringence to further reduce the scattering parameter. However, the impact on contrast is highly dependent on the cell gap and the overall retardation.

As shown in Table 2, LC-21-1 and LC-24-1 enable mixture designs with lower scattering parameters due to higher elastic constants and can improve the contrast ratio further while keeping the response time parameter at a comparable level.

Optimizing the LC mixture to achieve higher contrast is an effective strategy for enhancing the contrast ratio of IPS-type displays. With the latest developments in LC

materials, Merck has demonstrated how to increase the contrast of IPS-type displays, by increasing elastic constants and continuously invests in research to discover even better LC molecules with superior properties, enabling further contrast ratio improvements through optimized liquid crystal mixtures.

A challenge that must and will be addressed in future for developing LC mixtures with even higher elastic constants is the low-temperature stability: The high elastic constants of the LC mixtures cause strong interactions between the LC molecules, which may lead to phase transitions at lower temperatures, transitioning to smectic and crystalline phases.

2.3 Differentiated solutions for Gaming IT and TV

High contrast ratio serves as a clear differentiator in front-of-screen performance that customers can easily evaluate and appreciate. Therefore, it is no surprise that these advancements are being utilized not only in high-end monitors but also in gaming IT displays and large screen displays like TVs.

Each application has its unique requirements, necessitating specific developments and enhancements in liquid crystal mixtures. For instance, gaming monitors and notebooks demand extremely fast response times, which require low rotational viscosities. In response, Merck has developed a UB-FFS liquid crystal mixture specifically for gaming (High CR Mixture D in Table 3), achieving high contrast ratio while having a fast response time parameter which is essential within this segment.

Non-gaming notebook and tablet may require lower driving voltage to ensure low energy consumption when increasing CR. Merck has also addressed this by creating a mixture with increased dielectric anisotropy and high elastic constants (Mixture E in Table 3). This enables a high contrast ratio while having lower driving voltages compared to mixture A.

Table 3. Differentiated high CR UB-FFS mixtures

Property	High CR Mixture D	High CR Mixture E	High CR Mixture F
Development direction	Gaming IT	Low vop	TV
T_{NI}	88	103	99
Δn (589nm)	0.091	0.102	0.091
$\Delta \epsilon$ (1kHz)	-2.9	-4.7	-2.8
γ_1 / mPas	89	149	112
$K_{Avg.}$ / pN	15.2	16.3	18.2
γ_1 / K_{11} / mPas/pN	4.7	7.6	5.0

In term of TV applications, usually high-end TVs with mini-LED backlights require LC mixtures have high CR

to solve halo issue and fast response time to meet high frequency driving such as 120Hz/144Hz/165Hz. Merck has also developed a LC mixture which has both high contrast ratio and fast response time performance (Mixture F in Table 3) for premium TV products.

3 Conclusion and Outlook

History has demonstrated that superior display technologies ultimately prevail. This is also true for UB-FFS, a technology initially developed for higher-resolution displays that now showcases its full potential by providing significantly enhanced contrast ratio in IPS-type displays. Originally adopted in mobile phones, its application has since expanded to IT devices and TVs. With the ongoing development of new mixture concepts that feature a broad nematic range and stability at low temperatures, it is anticipated that this technology will continue to grow and present new opportunities for display manufacturers. For example, it presents significant potential for technologies not yet mentioned such as Head-Up Displays (HUD), offering both improved transmittance and exceptional contrast ratio. However, a key challenge that must and will be addressed is achieving an even higher TN-I and a broader phase stability.

As Merck is continuously developing new LC molecules to push the boundaries further, stay tuned for updates on the upcoming advancements in liquid crystal molecules and mixtures.

Together with each breakthrough we unlock the potential for more vibrant displays that will enhance our visual experiences in ways we have yet to imagine.

References

- [1] Schadt M., "Milestone in the History of Field-Effect Liquid Crystal Displays and Materials", *Japanese Journal of Applied Physics* 48(4), 2144-2148 (2008)
- [2] Chen T.-S., et al., "Advanced MVA III Technology for High-Quality LCD TVs", *SID Symposium Digest of Tech. Papers*, 40, 776-779 (2009)
- [3] Hanaoka K., et al., "A New MVA-LCD by Polymer Sustained Alignment Technology", *SID Symposium Digest of Tech. Papers*, 35, 1200-1203 (2004)
- [4] Lee S.-H., *SID Display Week 1999*, 202 (1999)
- [5] Mori H., *AM-LCD 1996, IDW 1996*, p. 189 (1996)
- [6] Huang Y., Hsiang E.-L., "Mini-LED, Micro-LED and OLED displays: present status and future perspectives", *Science & Applications* 9, 105 (2020)
- [7] Chen M.-T., Lin C.-C., *International Journal of Industrial Ergonomics* 34, 167-174 (2004)
- [8] DIN EN 12464-1, *Light and lighting – Lighting of work places – Part 1: Indoor work places*, (2011).
- [9] Lee S.-H., *Asia Display, Invited Talk*, (1998)
- [10] Lee S.-H., et al., "Electro-optic characteristics and switching principle of a nematic liquid crystal cell controlled by fringe-field switching", *Applied Physics Letters* 73(20), 2881-2883 (1998)
- [11] Lee S.-H., *SID Display Week 2013, Seminar* (2013)
- [12] Lee S.-H., *SID Display Week 2014, Seminar* (2014)
- [13] Pauluth D., Tarumi K., "Advanced liquid crystals for television", *J. Mater. Chem.* 14, 1219 – 1227 (2004)
- [14] Pauluth D., Tarumi K., "Optimization of liquid crystals for television", *J. SID* 13(8), 693 - 702 (2005)
- [15] Engel M., Bernatz G., Götz A., Hirschmann H., "UB-FFS: New Materials for Advanced Mobile Applications", *SID Display Week 2015, Invited Paper*, 645-647 (2015)
- [16] Utsumi Y., et al., "Light Leakage Behavior of Homogeneously Aligned Liquid Crystal Layers Placed between Crossed Polarizers", *Japanese Journal of Applied Physics* 47(4), 2144-2148 (2008)
- [17] Dickson G., "No End to LCD Innovation for Merck KGaA", *Information Display* (2023)